

👁 Note!

Please note that there can be small differences between your product and the images in these instructions.

👁 Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

👁 Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

⚠ Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Cancellation kit BMW 3er G20/BMW Z4 G29/Toyota Supra RZ A90

35020-30

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

Front axle

1

Fix the holder on the electronic component with cable ties 4,8 mm x 290 mm.

2

Fix the tape on the installed holder. **Adherend must be cleaned and degreased.**

3

Install the accelerometer bracket on the front dampers with the supplied screw and nut according to Fig 3. Fit the accelerometer to the bracket with the OE screw and supplied M6 nut.



4

Fix the electronic component on the damper with cable ties 4,8 mm x 290 mm. Position it so that it is facing the forward direction of the vehicle according to Fig 4.


Insert the standard connector into the electronic component connector until it locks.

👁 Note!

Adherend must be cleaned and degreased.
Mount the electronic component facing to the front of the vehicle as shown on the picture.

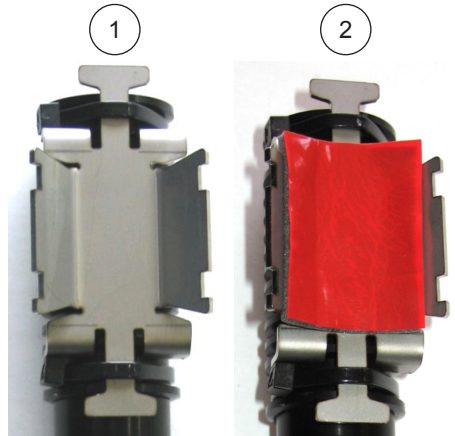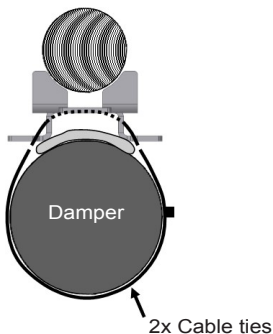

Accelerometer

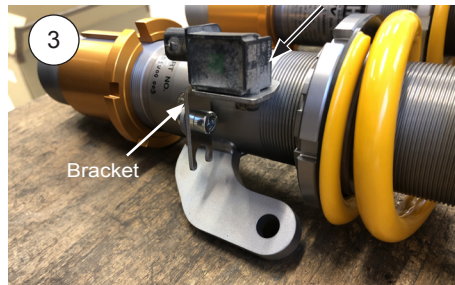

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

Rear axle

1

Fit the electronic component under the rear inner liner and fix it with the supplied cable ties according to fig 1.



Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_35020-30_0
Issued 2021-02-05

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com